


USER OPERATING INSTRUCTIONS

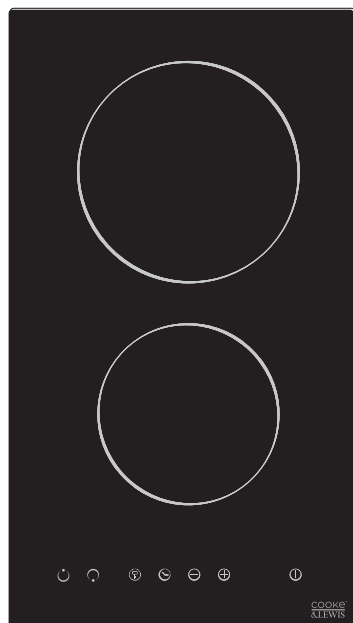

Protection from over-heating

- When the built-in sensor detects an excessive temperature, the hob will be switched off automatically.

Residual heat indicator

- **WARNING:** The display will show the letter "H" to indicate that the appliance is too hot to touch. **Auto shutdown**
- If you forget to switch off a cooking zone, the appliance will automatically shutdown after 120 minutes.







• Protection against unintended operation.



If a button is held down for ten seconds the appliance will sound a beep and display the error code E6. This will continue until the button is released.

	Reference	Description
	A	Cooking zone
	B	Reduce power output
	C	Increase power output
	D	ON / OFF
	E	Child lock
	F	Timer

01 Heating zone operation

When the ON/OFF key (D) " " is pressed, all the indicators show "—".



1. Select the cooking zone you wish to use by pressing the "  " key (A). The display will either show  or  accordingly.
2. Select the power level by pressing the "+" key (C) " " or "-" key (B) " ".
3. The power level will start at 0. Pressing the "+" will count up the power levels from 0 to 5 (max power) in numerical order. Pressing the "-" key will take the power straight from 0 to 5. Pressing the "-" key again will decrease the power level.
4. The zone button A and "0/H" will flash alternately for 20 seconds when the power is reduced to zero.
5. The display will have a residual heat warning of "H" until the cooking zone has cooled to a safe level.
6. To reuse the same cooking zone again, please follow the above steps.

Heating zone	Max. Power (230V~)
	1800 W
	1200 W




02 Safety mode (Child lock)

- You can lock the controls to prevent unintended use by children.
- When the controls are locked, all the controls except the OFF control are disabled.

To lock the controls

Turn on the hob (D) " " and touch the key (E) " " for 3 seconds; the display will show "Loc".

To unlock the controls

1. Make sure the ceramic hob is turned on.
2. Touch and hold key (E) " " for 3 seconds to unlock.
3. You can now start using your ceramic hob.
4. If you leave the hob locked and it switches off automatically, turn the hob back on using (D) " " and unlock using (E) " " for 3 seconds.






WARNING: When the hob is in the lock mode, all the controls are disabled except OFF which can still be used in an emergency.

03 Using the timer

You can use this function to switch off both cooking zones independently.

You can set the timer for up to 120 minutes.

1. Select the relevant cooking zone using (A) “ ” and select the required power level using (C).
2. Press the Timer key (F) “”, the timer indicator flashes with a zero for 5 seconds; if you do not select a time within 5 seconds this will be disabled.
3. Using the “+” or “-” buttons, you can adjust the time duration from 1 to 120 minutes. If you press and hold “+” or “-” the timer will increment ten minutes at a time.
4. Once the time has been set it will begin to count down immediately. The display will show the remaining time and the timer indicator flashes briefly and shows the remaining time on the display. As the timer counts down the display alternates between the power level and remaining time.
5. When the cooking timer expires, the corresponding cooking zone will be switched off automatically and an audible signal will beep 3 times.
6. Both zones can have their timers set independently and you can check the remaining time in each zone by selecting (A). Once one zone timer finishes, the time remaining in the other zone will be displayed.