


# 4 RING HOB

## USER OPERATING INSTRUCTIONS

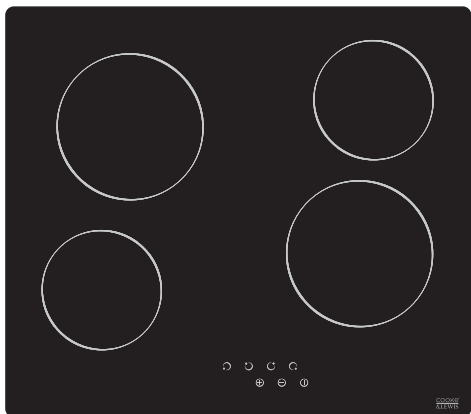

### Protection from over-heating


- When the built-in sensor detects an excessive temperature, the hob will be switched off automatically.

### Residual heat indicator

- **WARNING:** The display will show the letter “H” to indicate that the appliance is too hot to touch.
- **Auto shutdown**
- If you forget to switch off a cooking zone, the appliance will automatically shutdown after 90 minutes to 6 hrs depending on the power level.

### Protection against unintended operation.

If a button is held down for ten seconds the appliance will sound a beep and display the error code ERO3. This will continue until the button is released.

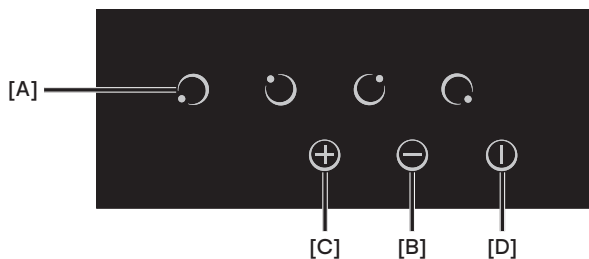

A Zone position

B Reduce power output

C Increase power output




D ON / OFF





---

## Heating zone operation

---

When the ON/OFF key " " is pressed, all the indicators show "0."

1. Select the cooking zone you wish to use by pressing the " " key. The "0" symbol selected will stay fully lit. All other zone indicators will dim.
2. Select the power level by pressing the "+" key " " or "-" key " "
3. The power level will start at "0". Pressing the "+" will count up the power levels from 0 to 9 (max power) in numerical order. Pressing the "-" key will take the power straight from 0 to 9. Pressing the "-" key again will decrease the power level.
4. The zone button "A" and "O/H" will flash alternately for 20 seconds when the power is reduced to zero.
5. The display will have a residual heat warning of "H" until the cooking zone has cooled to a safe level.
6. To reuse the same cooking zone again, please follow the above steps.

Heating Zone	Max. Power (230V~)
	1800 W
	1200 W
	1800 W
	1200 W

---

## Safety mode (Child lock)

---

To ensure the safety of children, the ceramic hob is fitted with an interlock device.

1. If one or more cooking zones are in use the child lock cannot be activated.
2. Please ensure that all of the cooking zones are in standby mode. Simultaneously press the "-" key and the furthest left zone selection key. The hob emits a beep and all keys should be released. At this point pressing the furthest left zone selection key once more will activate the child lock and L. will be shown in all 4 display windows.
3. In child lock mode, all keys are locked except the on/off key. No cooking zones can be activated. The appliance can only be switched on and off.
4. The child lock can be deactivated temporarily. Press the on/off key to enter the off mode. Then press on/off key again to enter standby mode. Simultaneously press the "-" key and the furthest left zone activation key. The child lock will be switched off temporarily. It will not be shown during this operation but it will reactivate the next time the hob is switched on.
5. The child lock can be permanently deactivated. Press on/off key to enter the off mode. Then press on/off key again to enter standby mode. Simultaneously press the "-" key and furthest left zone selection key. The hob will emit a beep and all keys should be released. At this point pressing the "-" key again will deactivate the child lock function.