




USER OPERATING INSTRUCTIONS

 On/off status: LED light display As shown in following pictures

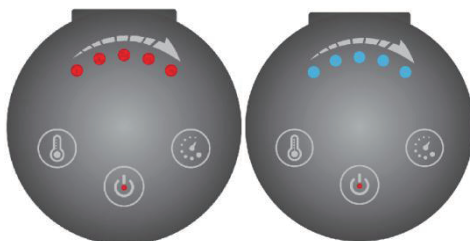

 Constant temperature mode: adjustable temperature range 45 °C -65 °C, default temperature 65°C, the 1st red light is 45°C, each red light lit later increases by 5. As shown in following picture



 BOOST mode: default timer heating time is 2 hours, can set the heating time 1-5 hours, each blue light represents 1 hour As shown in following picture



In timer mode, the heating temperature is fixed at 65°C and the temperature is not adjustable.


*The appliance can be switched off automatically when the set heating time is reached.




Heating status: When the current status is heating, the light at the power button is red, when the current status is not heating, the light at the power button is blue. As shown in the diagram.



Operating instructions

Switching on and off: Short press  to switch on the appliance and enter the thermostat mode.

Setting the temperature in thermostat mode: Short press  the red LEDs and they will light up one by one, the first point is 45°C, each subsequent point will increase by 5°C. Set the temperature until it reaches 65°C (5th LED), then short press back to 45°C (1st LED). After 5s of no operation after setting, the unit enters the working state.

Entering BOOST mode: short press  the blue LEDs will light up one by one, 1 hr - 5 hrs, BOOST mode default 2 hrs. To set the heating time: short press the  screen flicker, time add 1 hour (1 more light), set the time until it reaches 5 hours (all 5 lights), short press  again to set the time back to 1 hour (the first light). After 5 seconds of inactivity after setting, the appliance enters the working state. When the heating time is over the appliance switches off automatically.

Error display

If the detected temperature is less than -10°C or more than 85°C, all blue and red lights will be fully illuminated.