


## USER OPERATING INSTRUCTIONS

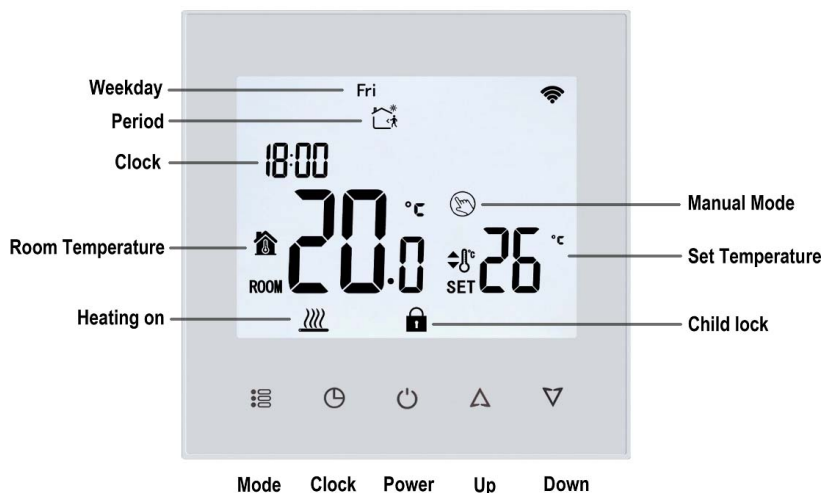

The current room temperature is displayed on the left of the screen and the desired room temperature on the right.

### Adjusting the room temperature

- Turn on the display using the 'Power' button
- Press the '**Mode**' button to toggle between '**Period**' away mode and '**Manual**' Mode.
- Use '**Manual**' Mode (small hand logo will appear), then use the **Up** and **Down** arrow keys to adjust to the desired temperature\*.

\*Please note: The heating panels are concealed in the ceiling and will take a little while to adjust the room temperature.